

Important: Trimmer Tape Lock

On leaving the factory, paraglider risers are equipped with a plastic buckle blocking trimmer use. As such, the paraglider conforms to the EN norm.

However, if you want to get that additional angle of attack regulation, all you have to do is move the buckle toward black loop which pulls the trimmer in.

Remember still, the paraglider was NOT certified in any other configuration than fully closed trims.

All details concerning full trimmer range option can be found in the manual.

Plastic buckle allows you to restore the certified canopy version in any moment.

In order to move the buckle, you have to loosen the tape - see pictures:

